



How to Use Your **CREATE-A-BREEZE** Ceiling Fan

By **FAN-TASTIC VENT**
Brings the Outside in... Instantly®

This fan is not rain sensor equipped

Operating Instructions:

1. Open dome approximately 3 inches or more by turning the hand crank (Create-A-Breeze has a built in safety switch that will not allow motor to operate unless dome is partially open).
2. Turn 3 speed knob to desired performance level (0-Off, 1-Low, 2-Medium, 3-High).
3. Slightly open a window of your choosing. The choice of window will determine how the air is going to flow through the cabin. Maximum airflow will be achieved through one slightly open window only.
4. Source of airflow is determined by the window opened. For best results, close all roof vents and open one window 3-4 inches near where maximum airflow is desired.

Recommendations: You may use your Create-A-Breeze while driving or in windy conditions. In this case keep your dome fully open. When storing your Travel Trailer or Motorhome, lower your dome until it is completely closed and turn the 3 speed knob to 0-Off.

NOTE: Fan-Tastic Vent does not recommend placing a vent cover over, or using a

NOTE: Fan-Tastic Vent does not recommend placing a vent cover over, or using a foam filter on your Create-A-Breeze. This greatly restricts airflow, causing accumulation of dust and increased sound levels.





How to Clean the Screen on Your Genuine **FAN-TASTIC VENT**[®] C e i l i n g F a n



Cleaning Instructions:

1. Turn fan motor off.
2. Locate the thumb tab on the Pop 'N Lock Screen, grab and pull down to unsnap.
3. Wash Pop 'N Lock Screen and fan blade with a light non-abrasive soap, rinse and dry.
4. Re-install the Pop 'N Lock Screen by gently snapping back in place.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.



Cleaning Instructions:

1. Turn fan motor off.
2. Remove 8 painted flat head Phillips screws around perimeter of screen insert.
3. Clean screen and blade with soap and water solution and reinstall.
4. Re-Install the screen by reversing step 2.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

Troubleshooting:

Fan-Tastic Vent wishes to assist any customer with any problem or need. Please call 1-800-521-0298 for assistance between 8 am and 5 pm E.S.T.

Fan-Tastic Vent Corp.
2083 S. Almont Avenue
Imlay City, MI 48444
Tel: (810) 724-3818
Toll Free: 800-521-0298
www.fantasticvent.com